


**CAUTION**  
 APPLY TEMPLATE AND DRILL FROM OUTSIDE. COMPENSATE FOR DOOR BEVEL IF ANY.

**MARK CENTER OF DOOR THICKNESS**

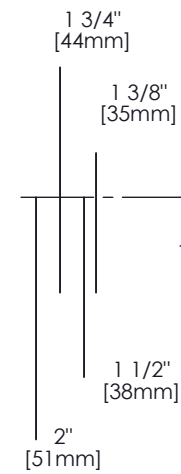


**MARK ACCURATELY, BORE STRAIGHT**

**RIGHT HAND**

**FOLD EXACTLY ON THE LINE**

**THIS FLAP FOLDS OVER THE EDGE OF THE DOOR**

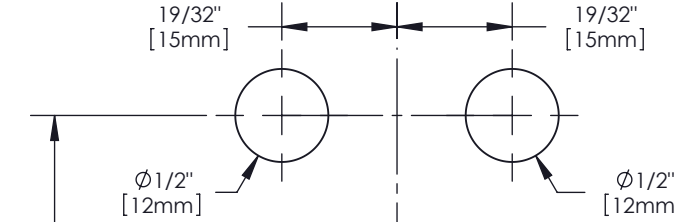

**REFERENCE ONLY, NOT TO SCALE**  
**DO NOT USE AS A DRILLING TEMPLATE**  
**CALL 800-849-8324**

**LEFT HAND**

**FOLD EXACTLY ON THE LINE**


**THIS FLAP FOLDS OVER THE EDGE OF THE DOOR**

4 29/32" [125mm]

2 3/4" [70mm]

2 3/4" [70mm]

**MARK CENTER OF DOOR THICKNESS**

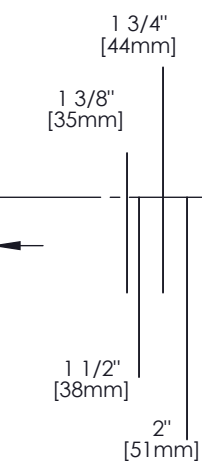

INSERT LATCH, MARK AROUND FACE PLATE OF LATCH, MORTISE TO DEPTH REQUIRED

**KABA Access Controls**  
 www.kabaaccess.com  
 Tel: 800.849.8324



**NOTE:** Suitable reinforcement shall be provided to prevent hollow metal door from collapsing. When door silencers are used, proper allowances must be made for strike location.